

CAMAC Equipment

CAMAC, Computer Automated Measurement And Control, is an IEEE-standard (583), modular, high-performance, realtime data acquisition and control system concept.

Since 1969, CAMAC has been used in many thousands of scientific, industrial, aerospace, and defense test systems around the world.

APPLICATIONS


Laboratory automation

Process control

CAMAC I/O in a GPIB-controlled system

Local GPIB control of a distributed CAMAC system

3988 GPIB Crate Controller

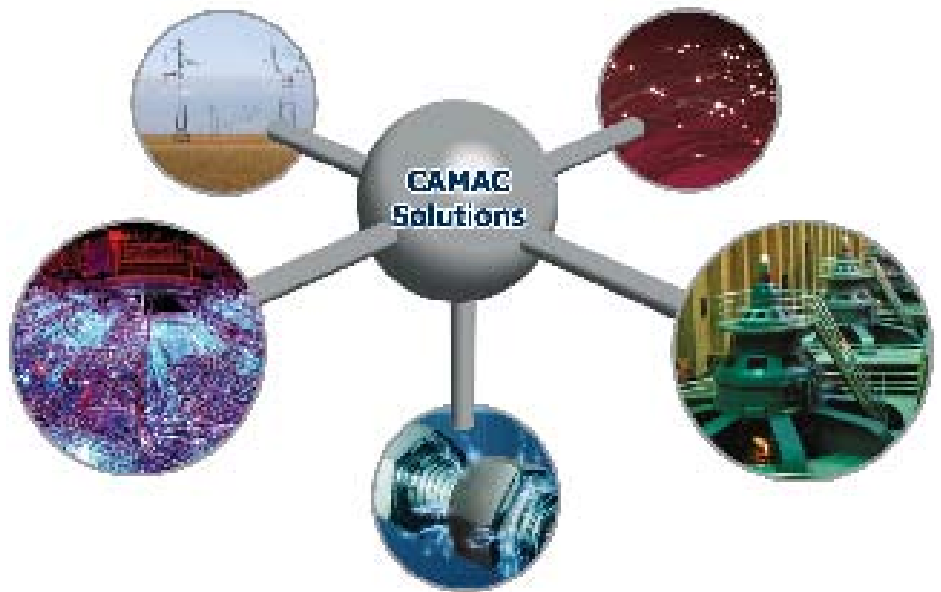

The Model 3988 is a double-width CAMAC crate controller that acts as a device on the General Purpose Interface Bus (GPIB).

FEATURES

- Provides an interface between a GPIB system and a CAMAC crate
- Supports data transfer rates up to 600 Kilobytes per second
- Acts as a main or auxiliary crate controller
- Meets all IEEE-488 requirements
- Supports Q-Scan, Q-Stop, and Q-Repeat block data transfers
- Contains a switch-selectable talk/listen address



GENERAL DESCRIPTION

The Model 3988 is a double-width CAMAC crate controller that acts as a device on the General Purpose Interface Bus (GPIB). This crate controller conforms to all applicable CAMAC specifications as well as those for the GPIB (IEEE Standard 488). The 3988 allows GPIB system controllers to communicate with up to 23 CAMAC I/O modules in a crate.

Two new ordering options are provided. The Model 3988-G3A uses the IEEE-48824-contact ribbon connector, while the 3988-D3A uses the IEC (European) 25-contact "D" connector. These new options support block transfers at data rates up to 600 kilobytes per second with the actual rate limited only by the controller and/or the host computer. The 3988-G3A/D3A supersede the 3988-G3A/D2A and are software-compatible with these earlier lower speed units.

The 3988 functions as a main or auxiliary crate controller. When used as a main crate controller, it can support one or more auxiliary crate controllers. When used as an auxiliary crate controller, the 3988 shares control of the crate with the main crate controller.

The 3988 is configured at the factory as a main crate controller. It can be changed in the field to function as an auxiliary crate controller by removing plug-in resistor packages. A 40-contact, rear-panel connector is then used for the Auxiliary Controller Bus.

OPERATING MODES

All command and data information are passed between the host computer and the 3988 in binary form, not ASCII characters. Read and Write data can be transferred in 8, 16, or 24 bit form (one, two, or three GPIB bytes), as set in the CSR (Control/Status Register). The various operating modes are described here:

SINGLE TRANSFERS

The Single Transfer operating mode is used to execute single CAMAC commands. The information passed to the 3988 and the responses from the 3988 are indicated below:

1. **From host to 3988:** NAF (Station number, Subaddress, Function code); Write data (Write operations only).
2. **From 3988 to host:** Read data (Read operations only); status byte response (if enabled) with Q, X, and other status information.

Q-SCAN

The Q-Scan operating mode is used to transfer a block of Read or Write data between a group of modules and the GPIB host computer. The standard CAMAC Q-Scan technique per IEEE Standard 683 is used. The Function Code, initial Subaddress, and initial Station number are passed to the 3988 in binary form. For Write commands, the Write data block will follow the command information. For Read commands, the block of Read data follows. The operation is terminated by a transfer count underflow or a scan-out-of-crate ($N > 23$) condition.

Q-STOP/STOP ON TRANSFER COUNT

This transfer mode is similar to the Q-Scan, except that the data transfers are to or from a single target NAF (i.e., Reading or Writing a block of memory in a module). The CAMAC command is repeated until a $Q = 0$ response or a transfer count underflow is reached.

Q-REPEAT

This operating mode is also used in conjunction with a single NAF. The number of valid transfers is determined by a transfer count underflow. Data is ignored (and the transfer count is not incremented) for all Dataway operations resulting in $Q = 0$.

SERVICE REQUEST CAPABILITY

The 3988 has full service request capability. It can issue a GPIB Service Request (SRQ) for the following conditions: Transfer Ended, CAMAC LAM(Look-at-Me), $Q = 0$, $X = 0$, ON-Line, Inhibit, and Invalid Transfer. When the GPIB host responds to a Service Request, it performs a serial poll and obtains the information from the Service Request Status register in the 3988. The 24-bit LAM pattern can also be obtained by reading the LAM Request register.

POWER REQUIREMENTS

+6 volts — 3.7 A

WEIGHT:

.97 kg. (2 lb. 2 oz.)



ACCESSORIES

Model 5843-Series Auxiliary Controller Bus Cable Assembly
Model 5864-Series GPIB Bus Cable Assemblies

ORDERING INFORMATION

MODEL	DESCRIPTION
3988-G3A	GPIB Crate Controller with IEEE 488-1978 (USA) Standard Connector (24-contact ribbon connector with metric hardware)
3988-D3A	GPIB Crate Controller with IEC (Europe) proposed Standard Connector (25-contact "D" connector)

Updated June 6th, 2005

Copyright © 2005 KineticSystems Company, LLC. All rights reserved.

KineticSystems Company, LLC

900 N. State St.
Lockport, IL 60441-2200

Toll-Free (US and Canada):

phone 1-800-DATA NOW
1-800-328-2669

Direct:

phone +1-815-838-0005
fax +1-815-838-4424

Email:

mkt-info@kscorp.com

To find your local sales representative or distributor or to learn more about KineticSystems' products visit:

www.kscorp.com